

Bluetooth set tools use instruction


Note:

1. Set the Bluetooth name can not exceed 20 bytes.
2. Bluetooth pairing password settings can not be more than 10 bytes.
3. Select the printer's version and the Bluetooth device's kind, and you can get the informations from the selftest page of printer.
4. When using this tool to ensure the Bluetooth device in a disconnected state.

This tool can realize our MINI Bluetooth series printer related functions:

- 1.Modify the Bluetooth device name;
- 2.Modify and query the Bluetooth device pairing password;
- 3.Modify and query the Bluetooth baud rate;

Instructions as shown in figure:

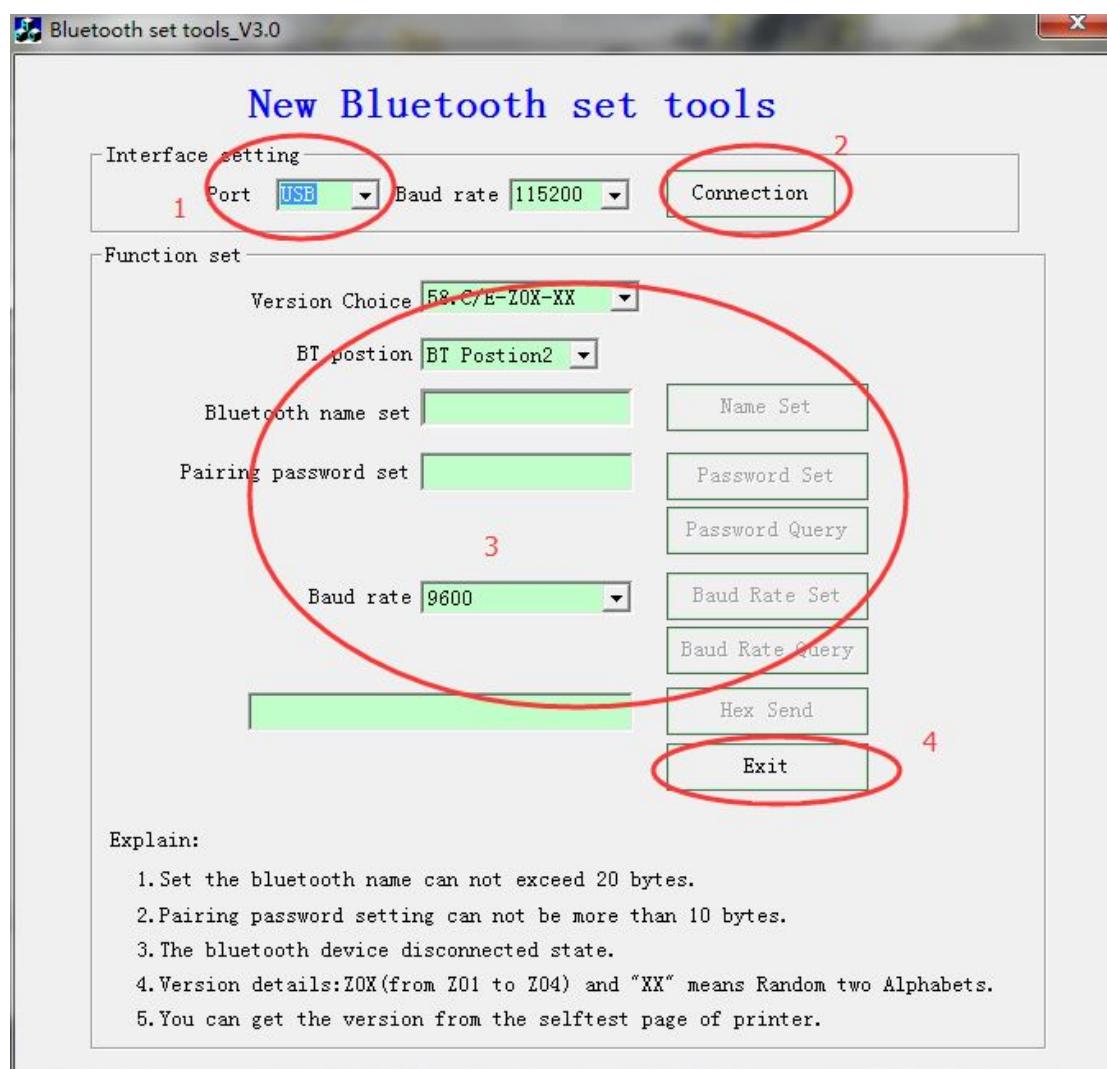

Step 1:

Set port , please choose “USB” , the factory default printer with standard USB cable;

Step 2:

Click “Connection” ;

Step 3:

1.According to the printer's selftest page,select the printer's version and the Bluetooth device's kind;

2.According to the need to set up the Bluetooth printer name ,enter within the dialog ,determined to set the name ,then Click on the “Name set” ;

3.According to the need to set up the Bluetooth printer pairing password ,input within the dialog ,confirmed after pairing set password ,please click “password set” ,if you want to query pairing password ,please click “Pairing password query” ;

4.According to the need to set up the Bluetooth baud rate. determined to set the baud rate, then click on "baud rate set", if you want to query the baud rate setting is correct, click "baud rate query" ;

Step 4:

Set after the completion of the click “Exit” window,you can turn off the tool;